 


2011 **cube**

QUICK REFERENCE GUIDE



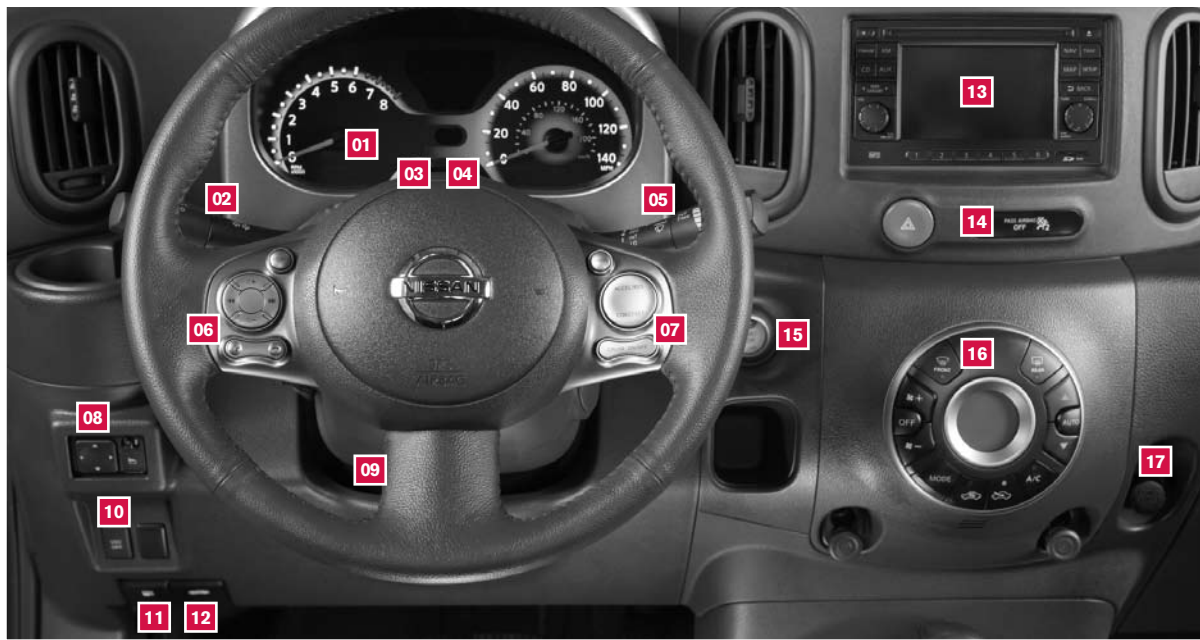

- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** INSTRUMENT BRIGHTNESS CONTROL\*
- 04** TWIN TRIP ODOMETER / TRIP COMPUTER\*
- 05** WINDSHIELD WIPER / WASHER SWITCH

- 06** STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH\*
- 07** CRUISE CONTROL
- 08** OUTSIDE MIRROR CONTROL SWITCH
- 09** STEERING WHEEL TILT ADJUSTMENT\*

- 10** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH\*
- 11** FUEL-FILLER DOOR RELEASE
- 12** HOOD RELEASE\*
- 13** AUDIO AND NAVIGATION SYSTEM

- 14** FRONT PASSENGER AIR BAG STATUS LIGHT\*
- 15** PUSH BUTTON IGNITION SWITCH
- 16** AUTOMATIC CLIMATE CONTROLS
- 17** POWER OUTLET\*

\*See your Owner's Manual for more information.

**NEW SYSTEM FEATURES**

Navigation System (if so equipped) . . . . . 2

**ESSENTIAL INFORMATION**

Loose Fuel Cap . . . . . 3  
 Tire Pressure Monitoring System (TPMS) . . . . . 3

**FIRST DRIVE FEATURES**

NISSAN Intelligent Key™ System (if so equipped) . . . . . 4  
 Seat Adjustments . . . . . 4  
 Outside Mirror Control Switch . . . . . 4  
 Starting/Stopping the Engine . . . . . 5  
 Headlight Control Switch . . . . . 5  
 Windshield Wiper Switch . . . . . 6  
 Automatic Climate Controls (if so equipped) . . . . . 6  
 FM/AM/XM® Radio with CD Player (if so equipped) . . . . . 7  
 Parking Brake . . . . . 7  
 Opening the Back Door . . . . . 8  
 Fuel-Filler Door . . . . . 8

**SYSTEM GUIDE**

Cruise Control (if so equipped) . . . . . 9  
 Bluetooth® Hands-free Phone System (if so equipped) . . . . . 9



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual, Electronic Quick Reference Guide (EQRG) and at [www.nissanusa.com](http://www.nissanusa.com).



This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

# new system features



## **NAVIGATION SYSTEM (if so equipped)**

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to your Navigation System Owner's Manual.

## LOOSE FUEL CAP

- A LOOSE FUEL CAP warning message will display in the twin trip odometer/trip computer display **01** when the fuel-filler cap is not tightened correctly.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## TIRE PRESSURE MONITORING SYSTEM (TPMS)

- The TPMS monitors tire pressure. If the TPMS is not functioning properly, the low tire pressure warning light will flash for approximately 1 minute and the light will remain on after 1 minute. Have the system checked by a NISSAN dealer.
- If the low tire pressure warning light illuminates but does not blink, check the tire pressure in all four tires. Adjust the tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver’s door opening.
- After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25km/h) to turn off the low tire pressure warning light.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

# first drive features

## NISSAN INTELLIGENT KEY™ SYSTEM (if so equipped)

The NISSAN Intelligent Key™ System allows you to lock or unlock your vehicle, open your back door and start the engine.

- To lock or unlock a door, push any door handle request switch **01** once.
- Push any door handle request switch **01** within one minute of unlocking the door and all other doors will unlock.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



 
## SEAT ADJUSTMENTS

- Pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Pull up on the lever **02** on the side of the seat to adjust your seatback forward or backward. Release the lever when you have found a comfortable angle and the seat belt fits properly.



### SEAT LIFTER (driver’s seat)


- Pull up or push down on the adjusting lever **03** repeatedly to adjust the seat height.

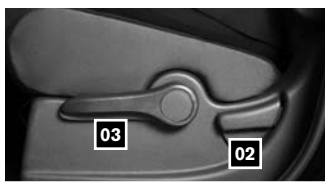

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

## OUTSIDE MIRROR CONTROL SWITCH

 - The outside mirror control switch is located on the left side of the instrument panel.
- Move the switch **01** to select the left or right mirror.
- Adjust each mirror to the desired position using the switch **02**.

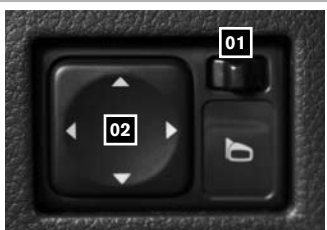

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION  
(NISSAN Intelligent Key™ models only - if so equipped)

- Depress the brake pedal.
- Move the shift lever to P (PARK).
- Push the ignition switch to start the engine.

NOTE: It is important to make sure the NISSAN Key is with you (that is, in your pocket or purse).

### TURNING THE ENGINE OFF

- Move the shift lever to the P (PARK) position, apply the parking brake and push the ignition switch.



### PUSH BUTTON EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push button ignition switch 3 consecutive times, or
- Push and hold the push button ignition switch for more than 2 seconds.

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to N (Neutral).
- Depress the clutch pedal to the floor.
- Turn the ignition switch to start the engine.

 
### TURNING THE ENGINE OFF

- Apply the foot brake and place the vehicle in first gear, then apply the parking brake and turn the ignition switch to OFF.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

## HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  $\exists \text{D} \exists$  position to turn on the front parking, side marker, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  $\exists \text{D}$  position to turn on the headlights.

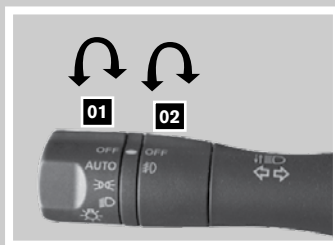

FOG LIGHT OPERATION (if so equipped)

The headlights must be on and the low beams selected for the fog lights to operate.

- Turn the switch (inside collar) **02** to the  $\exists \text{D}$  position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the OFF position to turn off the fog lights.


For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

# first drive features
 
## WINDSHIELD WIPER SWITCH

Move the lever to the following positions to operate the windshield wipers:

- 01** Intermittent (**INT**) - Front wipers operate intermittently.
- 02** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 03** High (**HI**) - Front wipers operate at a continuous high-speed.
- 04** Rear Wiper (**REAR**) – Twist the end of the lever to operate the first (**INT**) or second (**ON**) speed settings for the rear wiper.

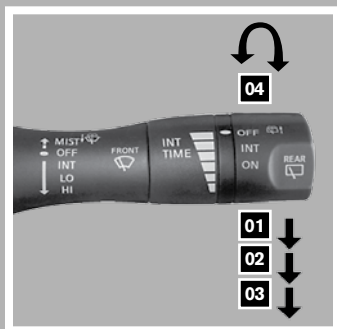

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## AUTOMATIC CLIMATE CONTROLS (if so equipped)

### **01** AUTO BUTTON

- Press the **AUTO** button to turn the system on and the fan speed, air flow distribution and temperature will be automatically maintained.

### **02** TEMPERATURE CONTROL BUTTONS

- Press the temperature control buttons up for warmer air or down for cooler air.

### **03** FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually adjust the fan speed up or down .

### **04** DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button to turn the system on or off.

### **05** DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window defroster switch to turn the system on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.





## FM/AM/XM<sup>®</sup>\* RADIO WITH CD PLAYER (if so equipped)

### 01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

### 02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

 
\*XM<sup>®</sup> Satellite Radio is only available on vehicles equipped with optional XM<sup>®</sup> satellite subscription service.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

## PARKING BRAKE

- To apply, pull the parking brake lever **01** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Press the button **02** and lower the lever completely.


For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

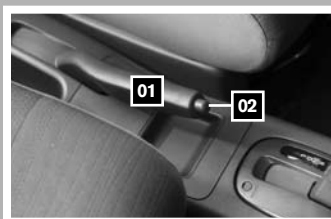


# first drive features

## OPENING THE BACK DOOR

Use one of the following methods to unlock the back door then pull the handle **01** to open:


- Press the  button on the keyfob twice.
- Push the back door request switch **02** while carrying the NISSAN Intelligent Key™ with you (if so equipped).

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

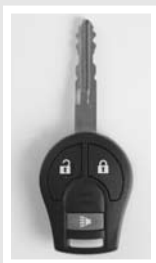


## FUEL-FILLER DOOR

 - To open the fuel-filler door, pull the release **01**.

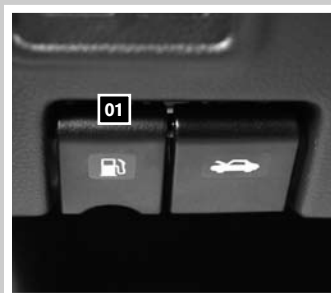

- The fuel-filler door is located on the right, rear side of the vehicle.

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

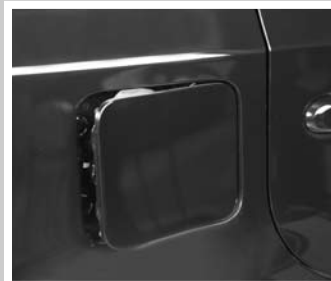

## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual or visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).





Nissan, the Nissan Brand Symbol, "SHIFT\_" tagline,  
Z and Nissan model names are Nissan trademarks.  
© 2010 Nissan North America, Inc.  
QR1E 0Z12UO  
Printing: October 2010 (04)

